

## USER MANUAL – USA version

TDR 5 s AC

TDR 7 s AC / TDR 7+7 s AC

TDR 8 s AC / TDR 8+8 s AC



### WARNING

Read the instructions before using the machine.

## **KEEP THIS USER MANUAL FOR FUTURE USE**

© 2024 Fri-Jado B.V., Oud Gastel, The Netherlands.

We advise you to contact your supplier for the guarantee period and conditions. Further we refer to our General Terms and Conditions for Sales and Delivery that are available upon request.

The manufacturer does not accept any liability for damage or injury caused by failing to adhere to these regulations or by not observing the usual caution or care in actions, operation, maintenance or repair activities, even if not explicitly described in this manual.

As a result of constant commitment to improvement, it may happen that your unit deviates in detail from what is described in this manual. For this reason, the given instructions are only a guideline for the installation, use, maintenance and repair of the unit referred to in this manual. This manual has been composed with the utmost care. The manufacturer shall, however, not be held responsible for any mistakes in this manual nor for any consequences thereof. The user is allowed to copy this manual for own use. Further all rights are reserved and nothing in this manual may be reproduced and/or made public in any way.

### Modifications:

In case of unauthorized modifications in or on the unit, every liability on the part of the manufacturer becomes null and void.

# CONTENTS

<b>1.</b>	<b>INTRODUCTION .....</b>	<b>5</b>
1.1	General.....	5
1.2	Identification of the unit.....	5
1.3	Pictograms and symbols.....	5
1.4	Safety instructions .....	6
1.4.1	General.....	6
1.4.2	Moving.....	7
1.5	Hygiene .....	7
1.6	Service and technical support.....	7
1.7	Storage.....	7
1.8	Disposal.....	7
<b>2.</b>	<b>DESCRIPTION OF THE UNIT .....</b>	<b>8</b>
2.1	Technical description .....	8
2.2	Intended use.....	8
2.3	Accessories .....	8
<b>3.</b>	<b>INSTALLATION AND FIRST USE .....</b>	<b>9</b>
3.1	Unpacking the unit .....	9
3.2	Installation and positioning.....	10
3.3	First use.....	11
3.3.1	Metal odor .....	11
<b>4.</b>	<b>OPERATION AND USE .....</b>	<b>12</b>
4.1	Control Panel.....	12
4.2	Switching-on the unit.....	13
4.3	Loading the unit .....	13
4.3.1	Loading the rotisserie using V-shape spits.....	13
4.3.2	Loading the rotisserie using meat forks (accessory) .....	14
4.3.3	Loading the rotisserie using meat baskets (accessory).....	15
4.3.4	Loading the rotisserie using two different accessories .....	15
4.4	Grilling time.....	16
4.5	Taking out the products .....	16
4.5.1	Taking out the V-shape spit .....	16
4.5.2	Taking out the meat forks (accessory) .....	16
4.5.3	Taking out the meat basket (accessory) .....	17
4.6	Emptying grease container / drawer.....	17
4.7	Switching-off the unit.....	17
<b>5.</b>	<b>OPERATE .....</b>	<b>18</b>
5.1	Starting a program .....	18
5.2	Delayed starting time (optional) .....	18
5.3	Pre-heating.....	19
5.4	While cooking .....	19

5.5	Adding extra time to the active program.....	20
5.6	Interrupt a program .....	20
5.7	Reset alarm signal .....	20
5.8	Power down .....	20
5.9	Cooking Correction (manager only) .....	21
<b>6.</b>	<b>SETTINGS.....</b>	<b>22</b>
6.1	General.....	22
6.2	Overview main parameters (Manager) .....	22
6.3	Service Menu.....	22
<b>7.</b>	<b>PROGRAM.....</b>	<b>23</b>
7.1	General.....	23
7.2	Adding programs .....	23
7.3	Edit programs .....	23
7.4	Deleting programs .....	24
<b>8.</b>	<b>CLEANING AND MAINTENANCE .....</b>	<b>25</b>
8.1	Maintenance schedule .....	25
8.2	Daily Cleaning.....	25
8.3	Weekly Cleaning.....	27
8.4	Additional Manual Cleaning .....	27
<b>9.</b>	<b>MALFUNCTIONS AND SERVICE .....</b>	<b>28</b>
9.1	Replace the mains cord .....	28
<b>10.</b>	<b>TECHNICAL SPECIFICATIONS .....</b>	<b>29</b>

## 1. INTRODUCTION

### 1.1 General

This manual is intended for the user of the TDR s AC (Turbo Deli Rotisserie with cleaning feature). The features and controls are being described, along with directions for the safest and most efficient use, in order to guarantee a long life of the unit.

All pictograms, symbols and drawings in this manual apply to all TDR s AC (USA) models.

### 1.2 Identification of the unit

The identification plate can be found on the outside of the machine, and contains the following data:

- Name of the supplier or the manufacturer
- Model
- Serial number
- Year of construction
- Voltage
- Frequency
- Power consumption

### 1.3 Pictograms and symbols

In this manual, the following pictograms and symbols are used:



#### **WARNING**

Possible physical injury or serious damage to the unit, if the instructions are not carefully followed.



#### **WARNING**

Hazardous electrical voltage.



#### **WARNING**

Danger of getting injured by hot surfaces.



Suggestions and recommendations to simplify indicated actions.



Recycling symbol.



Direction of view symbol.

## 1.4 Safety instructions



### WARNING

The outside of the unit can be very hot.



### WARNING

The maximum load on top of the unit may never exceed 110 lbs.



### WARNING

Risk of slippery floor: Spills may cause slippery surfaces, clean-up promptly.




### WARNING

See installation instructions for grounding requirements.



### WARNING

Always use the brakes on both front wheels:

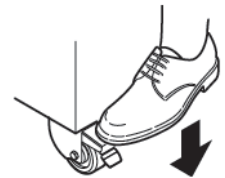

### 1.4.1 General

The user of the unit will be fully responsible for abiding the locally prevailing safety- rules and regulations.

The unit may be operated by qualified and authorized persons only. Anyone working on or with this unit must be familiar with the contents of this manual and carefully follow all guidelines and instructions. Never change the order of the steps to be performed. The management must instruct the personnel on the basis of this manual and follow all instructions and regulations.

The pictograms, labels, instructions and warning signs attached to the unit, are part of the safety measures. They may never be covered or removed, and have to be clearly visible during the entire lifetime of the unit.


Immediately repair or replace damaged or illegible pictograms, warnings and instructions.

- To avoid short-circuiting, never clean the unit using a water hose. For cleaning instructions, see section 8.
- During the grilling process, the unit can get very hot.
- When the door is opened the rotor stops and the heater is de-energized.
- The unit must be cleaned daily after use to ensure proper functioning and prevent fire hazard (over heating).
- Stacked units: Do not process food (e.g. grilling) in one unit while auto-clean the other unit.
- The fat collecting container must be emptied regularly, to prevent overflow.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

## 1.4.2 Moving

When moving the unit:

- Before moving the unit, first switch off the mains voltage by pulling the plug from the wall socket and empty the fat collecting container. After that, cool-down the unit for at least ten minutes.
- Disconnect the water supply and drain.
- Stacked units (7+7 or 8+8): remove the fat collecting container.
- The units equipped with wheels are not suited to pass ledges or obstacles higher than 0.4 inch.
- When moving the unit, always push at the center of the unit. Never on top. Never at the bottom.
- Make sure that the wheels can move freely, so they never touch the power lead.

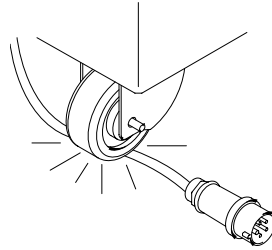

## 1.5 Hygiene

The quality of a fresh product always depends on hygiene. Especially grilling products. With the risk of salmonella contamination – especially for chicken products – you must make sure that grilled products can never be mixed with uncooked products. Also contact between grilled products and hands or tools that have been in contact with raw chicken meat, must be avoided at all times. Hands or tools that have been in contact with raw chicken meat, must be cleaned thoroughly.

## 1.6 Service and technical support

The electrical schematics of your unit is included. In case of malfunctions you can contact your dealer/service agent. Make sure you have the following data available:

- Model.
- Serial number.

This data can be found on the identification plate.

## 1.7 Storage

If the unit will not be used temporarily, and will be stored, follow these instructions:

- Clean the unit thoroughly.
- Wrap the unit from getting dusty.
- Store the unit in a dry, non-condensing environment.

## 1.8 Disposal



Dispose of the machine, any components or lubricants removed from it safely in accordance with all local and national safety and environment requirements.

## 2. Description of the unit

### 2.1 Technical description

The TDR s AC uses a combination of direct infra-red radiation and convection heat. The rotor is being wheeled by a maintenance-free motor with a gear box. The fan provides an equally divided heat. The glass panes are equipped with a heat reflecting layer to keep the heat inside the grill.

The plating of the unit is made of stainless steel. The product contact parts are made of stainless steel AISI 304. The mains cable is provided with a plug.

The intelligent control keeps the temperature inside the unit fixed to level set by the operator. During the entire process, the interior of the unit will be illuminated by halogen lamps. The intelligent control has a capability to store many different programs. Each program can consist of a pre-heat and additional steps in which the cooking time and temperature can be set. Communication through USB / WIFI (optional) enables easy read-out, re-work and creating of programs via a PC. For this, special software is available at Fri-Jado.

The unit has an automated cleaning program that cleanses the unit.

### 2.2 Intended use

The TDR s AC has been designed for grilling meat products and has a semi self-cleaning feature. Any other use will not be regarded as intended use.

The manufacturer accepts no liability whatsoever for loss or injury caused by failing to strictly adhere to the safety guidelines and instructions in this manual or due to carelessness during installation, use, maintenance and repair of the unit referred to in this manual and any of its accessories.

Use the unit in perfect technical condition only.

### 2.3 Accessories

Your unit contains the following standard accessories:

- V-shape spits.
- User manual.

For optional accessories contact [customer.service@frijado.com](mailto:customer.service@frijado.com).




## 3. INSTALLATION AND FIRST USE



All packing materials used for this unit are suited for recycling.

After unpacking, check the state of the unit. In case of damage, store the packing material, and contact the transporter within fifteen working days after receiving the goods.

### 3.1 Unpacking the unit

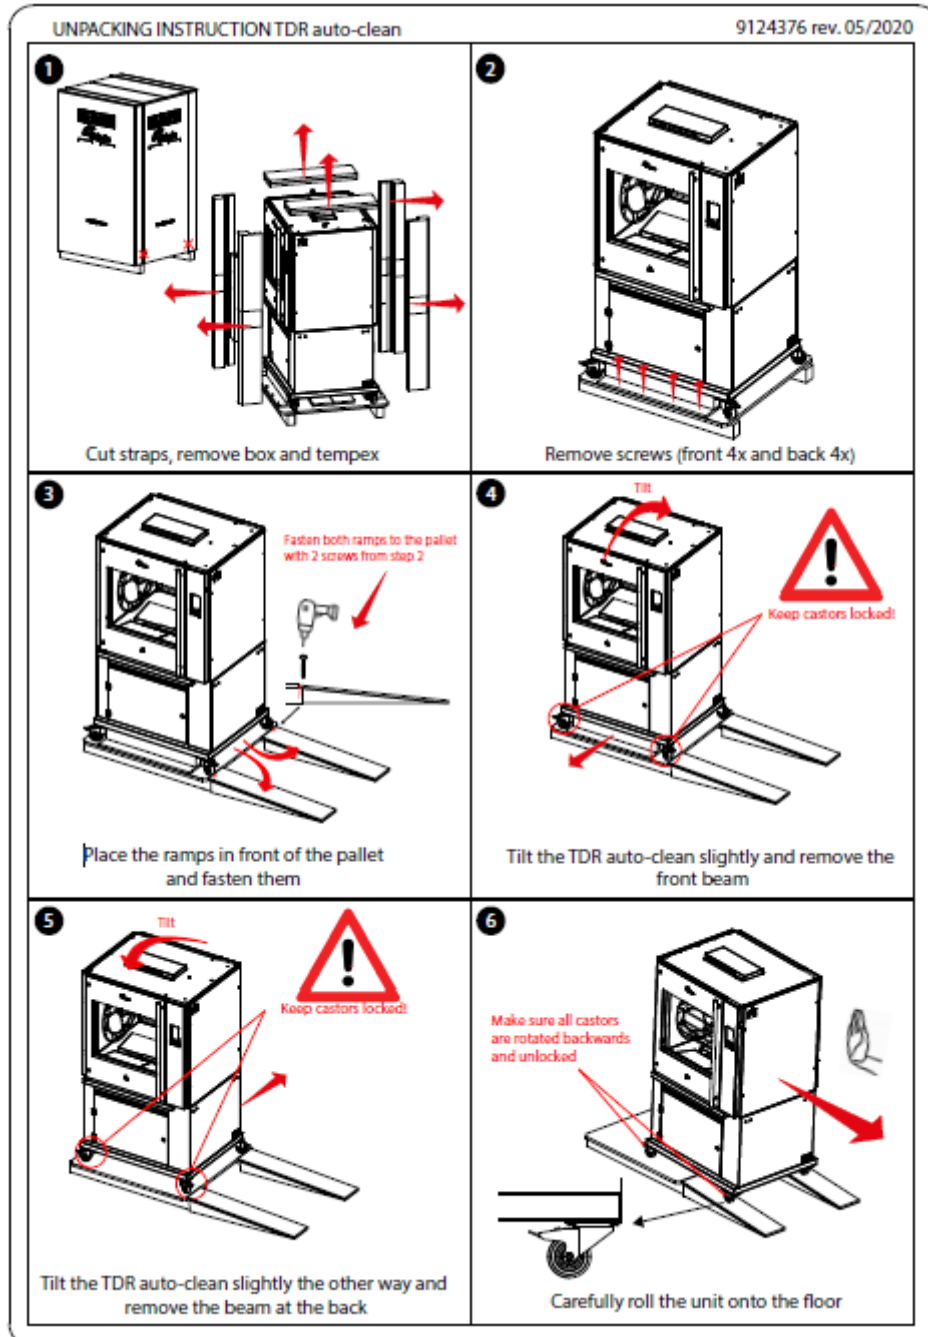

(Single unit shown)

1. Unpack the unit as initiated on the unpacking instruction on the packaging.
2. Remove all remaining packing materials from the unit.
3. Remove the protective foil from the metal parts.
4. Take off the standard accessories.

## 3.2 Installation and positioning



### WARNING

Electric shock hazard. Grounding instructions: only connect the appliance to an alternating current provided by a grounded wall socket, with a mains voltage in accordance with the information indicated on the data plate of the appliance.

It is the consumer's responsibility to make sure the electrical installation conforms with current national and local codes and wiring regulations.


Do not use a multi plug or extension cord. Such can result in fire, electrical shock, or other personal injury.

Failure to follow these instructions can result in death or serious injury.



### WARNING

Position the unit indoor on a flat and horizontal surface. A temporarily inclined plane of maximum 5° is allowed.

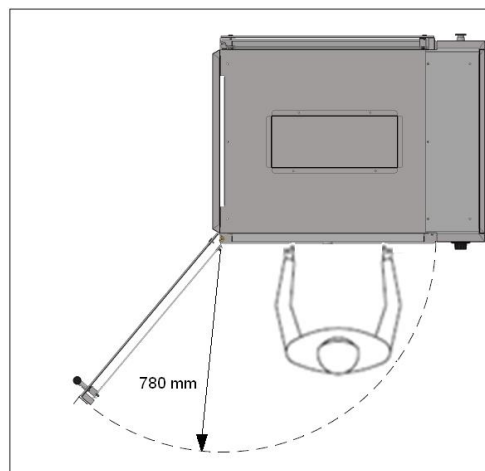

### Positioning:

- The user must have sufficient freedom of movement to properly operate the unit.
- The ambient temperature of the unit must be between 50 and 86°F.
- Use proper lifting– and transport tools to move the unit.
- Place the unit, using a spirit level, flat on a solid surface. Mind the weight of the unit!
- The minimum free distance must be at least 10 inch.
- The space between the unit and the surface it is put on, must be kept clear for proper ventilation of the electrical compartment.
- Keep a distance of at least 20 inch of free space above the unit. Placing the unit under a hood is required.
- In case of a wheeled unit, the floor must be flat and leveled.
- The products inside the unit must be clearly visible.
- Keep children away from the operating side of the unit.


### Installation:

- Secure the unit to the building structure using the tether bracket, refer to the installation manual.
- A water connection with an aerated valve with a ¾ inch thread connection, with a minimum continuous flow rate of 15 liters / min, must be available near the unit. The water pressure must be between 200 and 500 kPa (2 and 5 bar), preferably at least 300 kPa (3 bar). Refer to the Installation Manual.
- Use the hose supplied with the machine.
- An open drainage with a diameter of at least 1.6 inch must be available near the unit.
- The unit has a mains plug, and must be connected to a wall socket with the proper mains voltage. The wall socket must be mounted by a certified electrician.


## 3.3 First use

When using the unit for the first time, clean the interior thoroughly with soap suds and heat up the unit, see section 3.3.1. After commissioning discoloration of the cooking/grilling area can occur.


①

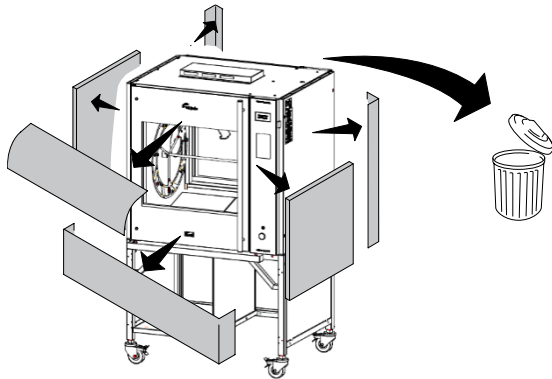


②

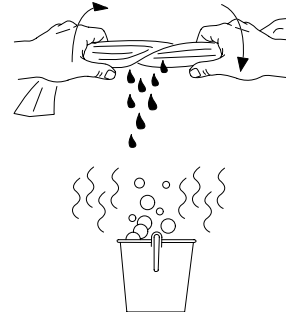


③

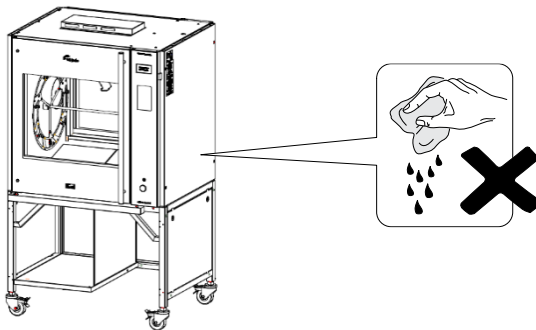

④

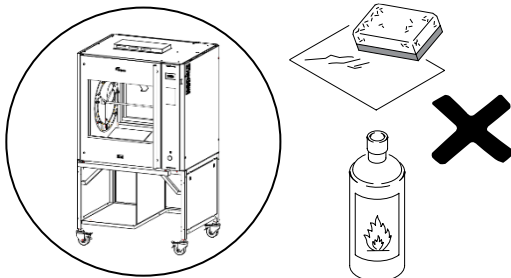

⑤

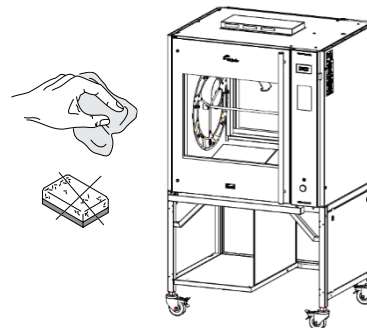



### 3.3.1 Metal odor

To remove the metal odor that will appear at first use, the unit must be heated at the maximum temperature (428°F) for at least half an hour.

1. Tap on the control screen and switch-on the unit.



2. Press  to display the recipe screen.
3. Create a new program containing ONE step of maximum temperature and a duration of at least 30 minutes (See section 7).
4. Select the new program and press  to start (See section 5).
5. Allow the unit to fully execute the program.

The unit is now ready for use.

4. OPERATION AND USE

4.1 Control Panel



Main Functions:



ON / OFF



Recipes



Wipe/clean touch screen (during count down)



Clean Rotisserie



Home screen



Language



Help function



Tap or swipe to select function or activate additional screen




Step Back (when shown at upper left corner)

## 4.2 Switching-on the unit



## 4.3 Loading the unit

When the door is open press the rotor button  to activate the rotor. This allow easy loading or unloading the products.

Whilst loading the unit, make sure that the rotor gets evenly loaded, so that the mass of the products is evenly spread over de rotor, causing an equal balance. Do not allow empty meat forks, meat baskets and chicken racks etc. in the grilling process.

### 4.3.1 Loading the rotisserie using V-shape spits

When using the V-shaped spits follow these steps:



Whole uncut chickens should always be grilled using the meat forks. This way their natural fat will baste each other, giving a perfectly slender cooking result. Refer to the You-Tube movie: "Fri-Jado instruction for binding and loading chicken".

For preparing chicken or any other poultry, you can work as follows.


- Place the skewer into the small outside hole on the rotor end plate on your left (as you face the oven). The back of the V-shape spit should be pointing towards you.




- Fit the other end on the spit into the small corresponding holes on the rotor end plate on your right (as you face the oven).
- Make sure the spit is level. If spit is not level make sure you are using the correct holes on the rotor end plates.

## 4.3.2 Loading the rotisserie using meat forks (accessory)

For preparing chicken or any other poultry, you can work as follows.

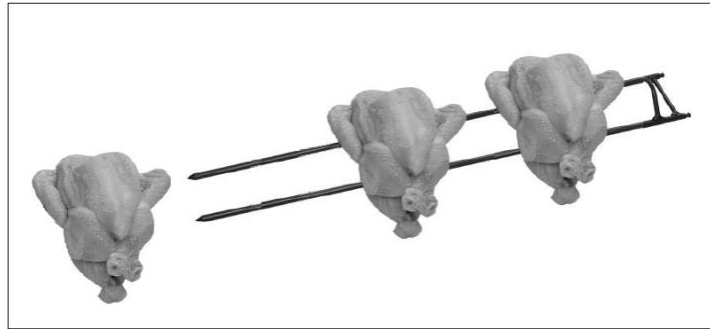

1. Insert one point of the meat fork through the chest at the position of the wings. Insert the other point through the drum sticks. Don't forget to include the wings.
2. Leave some space between the products, for an even exposure and browning.
3. Put the meat forks onto the rotor disks in such a way that during grilling the chicken breasts face the operator.
4. Put the points of the meat forks through the appropriate holes in the rotor disks.

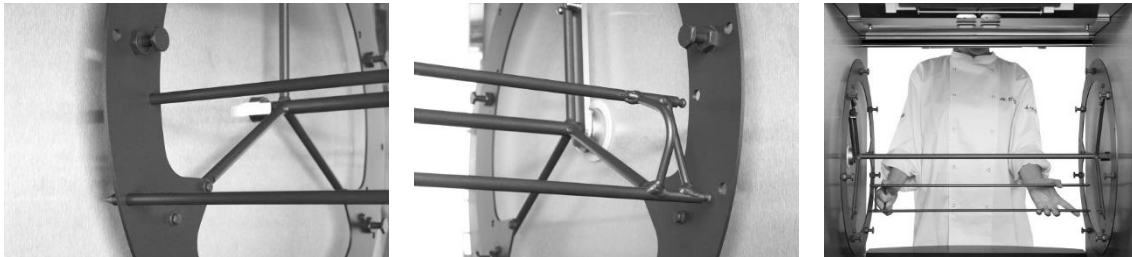

5. The other end of the meat forks must be put through the corresponding holes in the opposite rotor disk.
6. To insert the remaining meat forks in the unit, act as follows:
  - Switch-on the unit using the on/off button.
  - With the door opened, use the rotor button to move the rotor to easily insert the next meat fork. Keep the rotor button pressed until the rotor reaches the desired position.
  - Repeat these steps, until all products are loaded.

## 4.3.3 Loading the rotisserie using meat baskets (accessory)


If you are using meat baskets, act as follows:

- With the TDR 5 you must stick the ends of the meat baskets through the appropriate holes of the rotor disks.
- With the TDR 7 and TDR 8 you must attach the meat baskets to the appropriate pins.



(type for TDR-8 is shown)

- Whilst loading the unit with meat baskets, you must see to it, that the rotor gets evenly loaded, so that the mass of the products is evenly spread over de rotor, causing an equal balance.
- Also see to it that no meat parts are sticking out of the baskets.

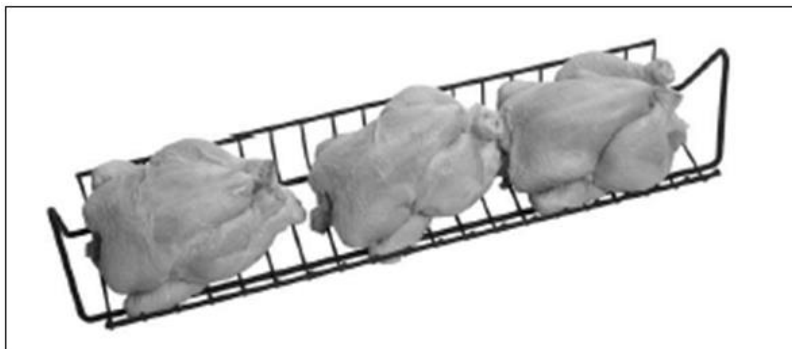

## 4.3.4 Loading the rotisserie using two different accessories



### WARNING

After loading the rotor, at least make ONE full rotation, and check whether the rotor can spin without obstructions.

If you want to load the unit using two different accessories at the same time, always fill the rotor with ONE accessory fewer than the maximum allowed quantity. See to it that accessories of the same type are placed consecutively.



#### 4.4 Grilling time

Grilling time depends on a number of factors:

- The ambient temperature and draft in the direct vicinity of the unit.
- Grilling temperature.
- The initial product temperature.
- The sort of meat (fat or lean) and with or without additives.
- The mass and shape of the product.
- The total amount of meat to be grilled in one grilling cycle.
- The end result.



#### Seasonings

The use of herbs and seasoning adds a specific twist to every meal. Using them right is of great importance for the end result.

Guidelines for seasoning are:

- Preferably use the special chicken and meat seasonings of the supplier of the Fri-Jado Grill. There are special seasoning mixtures for poultry, lamb, pork, large meat, game and fish.
- Season the products to be grilled when dry.
- Season the products 90 minutes before grilling at the most to prevent the spices from abstracting too much fluid from the meat.
- Do not add oil or grease while grilling.
- Season chicken on the inside and on the outside.

#### 4.5 Taking out the products



#### WARNING

After the grilling, the interior of the unit and the glass panes are very hot. Always use oven gloves when taking out the meat forks or other accessories.

##### 4.5.1 Taking out the V-shape spit

When taking out the V-shape spit, it is best to act as follows:

1. Hold the V-shape spit firmly.
2. Slightly lift the end with the grips and shift the V-shape spit into the direction of its point. This releases the V-shape spit.
3. Take the V-shape spit at its other end and take it out of the unit.
4. Remove the products from the V-shape spit.



Refer to the You-Tube movie: "Fri-Jado instruction for unloading chicken from a rotisserie".

##### 4.5.2 Taking out the meat forks (accessory)

For taking out the meat forks you can use the same principle as described in section 4.5.1.



## 4.5.3 Taking out the meat basket (accessory)

When taking out the meat basket from the TDR it is best to act as follows:

1. Slightly lift both ends of the meat basket.
2. Move the basket towards either the left or right hand side of the unit. This action unlocks one end of the basket.
3. Move the unlocked end towards you and take out the basket from the unit.

Depending on the number of prepared products you may have to empty the baskets before they can be removed.

## 4.6 Emptying grease container / drawer



### WARNING

Check the grease container / drawer after each cooking process and empty already when about half full to avoid overflowing.



### WARNING

Grease will be hot immediately after cooking. Allow grease to cool or use extreme caution and wear insulated gloves or safety mitts.


### Single Units:

1. Open the under-frame door.
2. Take the grease container out.
3. Empty the container.
4. Place the (emptied) container back.
5. Close the door.



### Stacked Units:

1. Take the grease drawer out.
2. Empty the drawer.
3. Place the (emptied) drawer back.

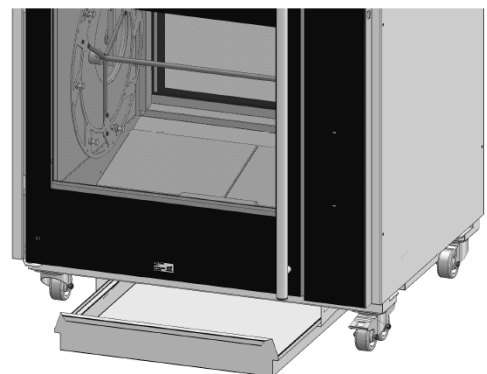


## 4.7 Switching-off the unit



## 5. OPERATE

### 5.1 Starting a program



1. Press .
2. Select the required program. The total duration of the program is shown in minutes next to the program name.




3. Press .



### 5.2 Delayed starting time (optional)

When the Delayed starting time function is activated (at manager menu), a delayed starting time can be set.

1. Press the start delay icon .



2. Set the desired start time .



3. Press .




4. Select the required program.

5. Press .



6. Check start time. To confirm, press **Continue**.
7. Check: Change fat container. Press **Continue** when executed.
8. Start delay time is set, program starts automatically at the set time.

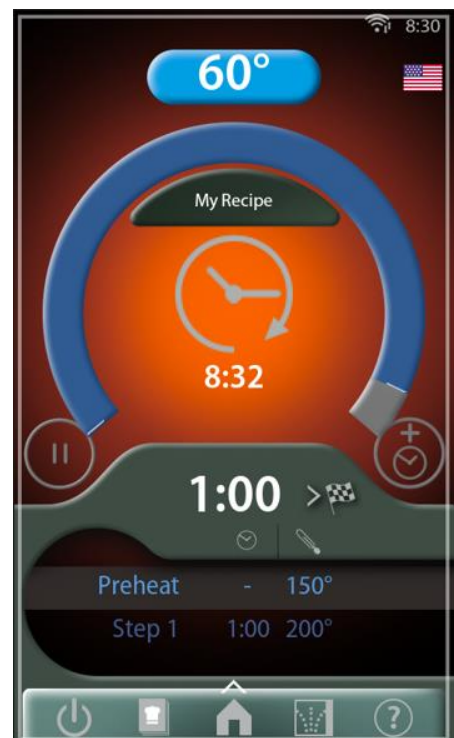

## 5.3 Pre-heating


When the pre-heat function is activated (at manager menu), the unit will start this function after selecting a program.

The screen will display the actual temperature (at the top).

Tap on the temperature box to see the set pre-heat temperature (approx. 5 sec.).

When the set temperature is reached, the screen will show: "Preheat done. Waiting for oven to be loaded" and a sound is activated.

Load the rotisserie and press .

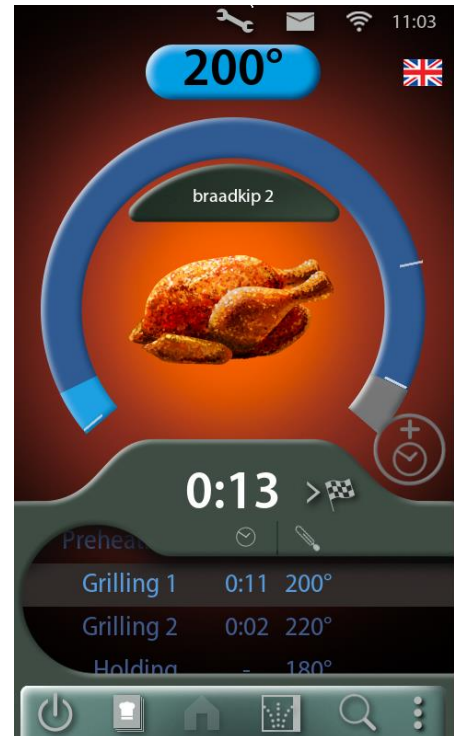


## 5.4 While cooking



### WARNING

Opening the door during a grilling program or a cleaning program causes the unit to stop and a warning is shown.

The unit will continue when the door is closed and  pressed.

During the cooking process, the display shows a graph with the:


- planned trajectory (dark blue time line).
- processed trajectory (light blue time line).
- program steps (white stripe).
- and the set temperature (at the top).

In the center the graph, the program name, current function and remaining time are shown.

In the bottom of the screen the process steps are given.

The screen will display the set temperature (at the top). Tap on the temperature box to see the actual temperature (approx. 5 sec.).

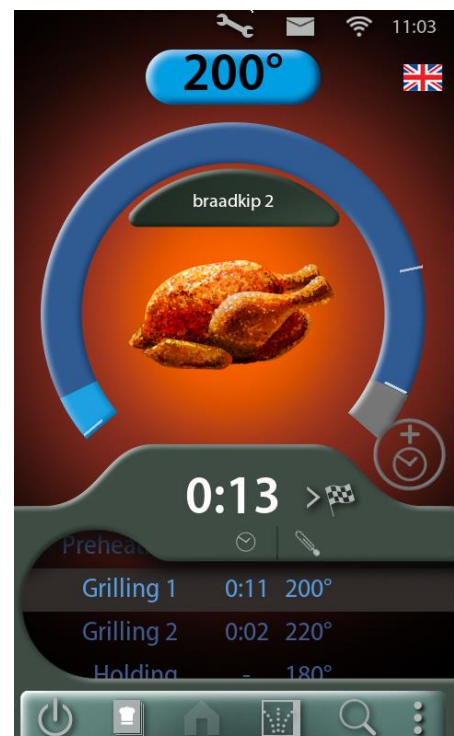

When 'cook correction' is switched-on the remaining time will be automatically adjusted.



## 5.5 Adding extra time to the active program

During the process extra time can be added (when activated in the manager menu), by following the next steps:





1. Press .
2. Set extra time.
3. Select  to save setting.


The display now shows the extra time, which will be added to the last cooking step. The screen always shows the total amount of extra time.

## 5.6 Interrupt a program


Interrupt temporarily:

1. Press .
2. Press  to resume the program.

Interrupt definitely:

Press  and press on Cancel Receipt.

## 5.7 Reset alarm signal

When an alarm signal has been set, a message will occur. Press  to return to the main menu.

## 5.8 Power down

If no program is active and no key is touched within the next 60 minutes the unit will switch-off automatically.

This option can be both switched-off or adjusted by a service engineer.


### 5.9 Cooking Correction (manager only)

It is possible to set a cooking correction in a program. This function adjusts the cooking time of the program based on the internal temperature to assure the same result is obtained as a reference run. With this function the quality of the products will remain constant regardless of quantity of the load, initial temperature of the load and age of the unit.

The cooking correction function is set to “on” by default and can be changed by the service mechanic.

**Note:** If cooking correction is enabled but no reference program is available, the program will run according to its original settings and will not correct itself.

Creation of a reference of the program:

1. Make a program (see chapter 7)
  - It may be required to experiment to determine the parameters for obtaining the desired result.  
Take into account:
    - Temperature
    - Time
    - Load of the unit. It is recommended to load for 75%.
2. Once all the parameters have been determined and the program has been updated to obtain the desired result, the reference program can be stored.
3. Open the manager settings menu.
4. Select the function “reference cook”.
5. Select the program.
  - Programs that already have a reference will have the pictogram: 
6. Load the unit the same amount as determined in step 1.
7. Start the program.
8. After the program has been completed, the reference point will be set automatically.

## 6. SETTINGS

### 6.1 General

The settings of the unit can be changed by using the control panel.

There are three kinds of settings:


- Information,
- Manager,
- Service.



Select  to enter the setting menu.

The Manager and Service section are password protected.



Press  to go one level back.

### 6.2 Overview main parameters (Manager)

Setting	Function and values
Change pin code	• 0000 – 9999 Setting the pin code for access to the Manager Menu. This pin code can also be used for access to the Program Menu.
Toggle light	• ON – OFF
Temperature unit	• °C – °F
Volume unit	• Lit – Gal
UTC Time	• Setting the current time (UTC Time)
UTC Date	• Setting the current date (UTC Date)
Time zone offset	• -/ 12 – +/ 12
Time format	• 24h – AM/PM
Date format	• D/M/Y – M/D/Y
Start delay recipe	• ON – OFF
Alarm	• YES – NO
End-user recipe editing	• NO – YES
Ask weight	• NO – YES
Preheat mode	• NO – 1x – continues
Preheat temp default	• 68 – 302°F (Factory setting at 302°F)
Eco function	• NO – YES
Audio settings	• 1 – 11
Audio factor	• 1 – 100
Test audio	
Sound set	• Marimba – Bell – Beeper
Keyboard beep	• OFF – ON
Filter capacity	• 50 – 30000, or “0” for infinite
Lime filter	Remaining capacity of lime filter
Lime filter replaced	• NO – YES
Clean screen time	• 10 – 60 sec
Store Number	
Reference cook	
Recipes -> USB	
Recipes <- USB	
I+ recipes<-USB	
Add recipes<-USB	

### 6.3 Service Menu


The service menu contains settings for the security of the unit. This can only be accessed by the supplier or a service technician.

## 7. PROGRAM



### 7.1 General

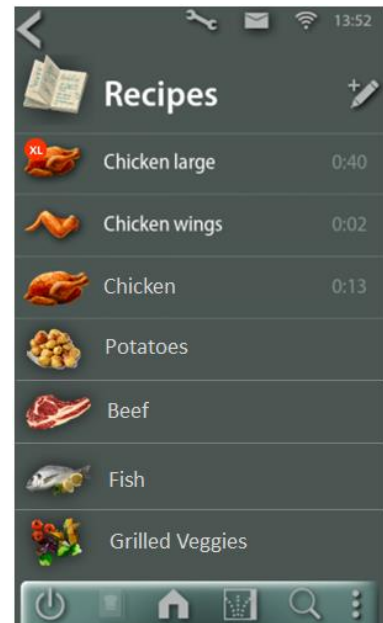

Enter the recipe menu





### 7.2 Adding programs

1. Select .
2. Enter the program name.
3. Enter the preheat step (or left blank).
4. Add cooking steps (swipe additional step at the bottom of the screen upwards).
5. Once complete press .

**Note:** step name can be changed (press on it).



### 7.3 Edit programs

1. Select recipe to edit.
2. Select .
3. Make required alterations.
4. Once complete press .


## 7.4 Deleting programs




Deleting of a program cannot be undone.

1. Select recipe to delete.



2. Select .



3. Select .

4. Select Yes.



## 8. CLEANING AND MAINTENANCE



### WARNING

Appliance must be disconnected from the power supply during manual cleaning or maintenance and when replacing parts.

Do not use aggressive or abrasive materials. These will damage the surface which will make it more difficult to remove dirt.

Clean the inside, the removable parts and the accessories thoroughly with cleanser and water before putting the unit into use. Follow the cleaning instructions as described in this chapter.

Treat the outer surface of the interior window with a soft cleaning agent to protect the reflection layer.

Cleaning should not be delayed beyond 8 hours of service.

Wear rubber gloves when cleaning.

Stacked units: Do not process food (e.g. grilling) during auto-cleaning the other unit.



### WARNING

Never use a water hose for cleaning. Water can seep into the unit through the ventilation holes of the unit.



Descal functionality is depending on service setting: contact your dealer for more information.

### 8.1 Maintenance schedule

Item	Action	Frequency
Interior	Clean, see section 8.2.	Daily
Exterior	Use Stainless Steel cleaning spray to remove stains, and restoring the gloss, see section 8.3.	Weekly
Interior	Additional Manual Cleaning, see section 8.4.	Monthly
Interior	Professional maintenance: contact your dealer.	Yearly



For hygiene matters and optimum state of your unit, it is advised to maintain a fixed daily cleaning schedule.

### 8.2 Daily Cleaning



### WARNING

Cool-Down the unit prior starting the cleaning program.



### WARNING

Accessories must be removed from the unit during the cleaning program. The rotor itself is meant to be remain in the unit.



### WARNING

Opening the door during a cleaning program causes the unit to stop and go to fault state. The program will continue when the door is closed.

Depending the temperatures you are operating on, pollution will be build up in time due of burning in the fat particles on the walls of the Rotisserie.

This building up also occurs when you are using stuffing or marinades in your product.

## Cool-down the unit first !

1. Take a cleaning Cartridge *ProteClean*<sup>1</sup>.




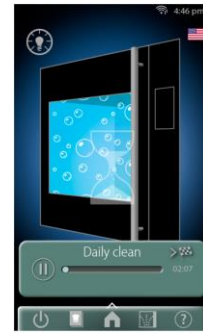
2. Open the Rotisserie door.
3. Remove the cap of the bottle.

**Don't punch the seal!**

4. Place the Cartridge upside down in the cartridge holder.
5. Close the door.



6. Press .
7. Select cleaning program: **Daily Clean**.
8. Press continue.



The Rotisserie starts cleaning. The screen shows the status of the program including finish time.

9. When finished remove the cartridge. Dispose the cartridge.
10. Remove the deflector plates and filters and clean them manually.
11. Open the drain filter and clean it with a brush. Push it completely through the drain.
12. Inspect the Rotisserie. Remove any spots or remains in the rotisserie with a cloth.
13. Replace the cleaned filters and deflector plates.



**The unit is now ready for use.**



### WARNING

If the cartridge is not taken out before using the Rotisserie, the plastic will melt and causes smoke and contamination risk.



Contact your supplier for the appropriate *Fri-Jado Rotisserie Cleaning Cartridges*. Additional are *Fri-Jado In Between Clean* and *Fri-Jado RotiShine Descale* cleaning products available. Please contact Fri-Jado for more information.

<sup>1</sup> *ProteClean* disclaimer: In some cases a quick release of the second stage of the product can cause black stains in the stainless steel. This is nothing to worry about. A descale program with *Rotishine* will help to reduce these stains.

### 8.3 Weekly Cleaning

**WARNING**

The control panel may only be cleaned using a damp cloth.

**The exterior:**

- Clean the exterior with cleaning agent or hot water combined with an appropriate cleaning agent.
- Dry the exterior thoroughly by using a dry cloth.

### 8.4 Additional Manual Cleaning



The unit can be cleaned best shortly after use, when it is still lukewarm. Grilling residue and fat can be removed easily in this state.

The best cleaning can be achieved by using special oven- or grill cleaner.

The door has a magnetic lock. Regularly check the surfaces between the door and grill, and clean if necessary, to avoid air leaks.

**Glass doors:**

- Open the outer glass doors
- Unlock the inner glass doors (they are magnetically locked to the outer doors).
- Clean the panes with cleaning agent or hot water combined with an appropriate cleaning agent.
- Dry the doors thoroughly by using a dry cloth.
- If possible, leave the glass doors open at night.

**Air Filter:**

- Remove the air filter in the ceiling of the unit.
- Clean the air filter manually.
- Replace the air filter back. Ensure it is locked correctly!

## 9. MALFUNCTIONS AND SERVICE

Before you contact your supplier/dealer in case of a malfunction, there are some items you can check yourself:

- Is the power supply working properly? Check fuses and differential switch.
- Has the timer clock been properly set?

Item	Malfunction	Possible action
Control	Program do not start	<ul style="list-style-type: none"> <li>• Check if both doors are closed correctly.</li> </ul>
Cleaning	Leaks water during cleaning	<ul style="list-style-type: none"> <li>• Door not closed correctly.</li> </ul>
Cleaning	Oven not clean after cleaning cycle	<ul style="list-style-type: none"> <li>• Not enough detergent, check supply.</li> <li>• No water supply, check.</li> <li>• Drain polluted, clean.</li> <li>• Drain valve not working properly, check.</li> </ul>
Lamp	Does not light up	<ul style="list-style-type: none"> <li>• Defect, replace.</li> </ul>
Oven	Product is not getting done equally	<ul style="list-style-type: none"> <li>• Try a lower cooking temperature.</li> <li>• Check fuses and/or the differential switch.</li> </ul>
Oven	The oven does not heat up	<ul style="list-style-type: none"> <li>• Open and close door.</li> <li>• Check fuses and/or the differential switch.</li> </ul>
Mains cord	Damaged	<ul style="list-style-type: none"> <li>• Replace, see section 9.1.</li> </ul>

### 9.1 Replace the mains cord



**WARNING**

Hazardous electrical voltage.

If the mains cord is damaged, it must be replaced by the manufacturer, his service agent or a similarly qualified person in order to avoid hazards.

**10. TECHNICAL SPECIFICATIONS**

**WARNING**

Consult the identification plate to get the proper specifications of the unit. The electrical data may vary from country to country.

<b>Model</b>	<b>TDR 7 AC</b>	<b>TDR 7+7 AC</b>
Dimensions		
- Width	44 inch	42 inch
- Depth	38 inch	38 inch
- Height	71 inch	84 inch
Weight		
- Gross	827 lbs.	1091 lbs.
- Net	772 lbs.	948 lbs.
Maximum ambient temperature	95 °F	95 °F
Sound pressure	< 70 dB(A)	< 70 dB(A)
Electrical installation		
- Voltage	3~ 208 V	3~ 208 V
- Frequency	50/60 Hz	50/60 Hz
- Required power	12 kW	12 kW (2x)
- Max. nom. current	35.5 A	35.5 A (2x)
Plug	NEMA15-50P	NEMA15-50P (2x)
Length of power cable approx.	75 inch	75 inch (2x)
Water connection, aerated	¾ inch	¾ inch (1x)
Water pressure	200 – 500 kPa	200 – 500 kPa
Drain, open connection	min. 1 5/8 inch	min. 1 5/8 inch (2x)

Notes.

Notes.

Fri-Jado B.V.  
Blauwhekken 2  
4751 XD Oud Gastel  
The Netherlands  
Tel: +31 (0) 76 50 85 400

Fri-Jado Inc.  
1401 Davey Road, Suite 100  
Woodridge IL 60517  
USA  
Tel: +1-630-633-7950

[www.frijado.com](http://www.frijado.com)